
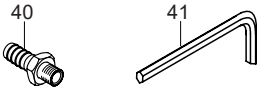


| Item | Part No    | Description                              | Qty |
|------|------------|--|-----|
| 1    | 672.522    | Valve Cap                                | 1   |
| 2    | 658.238    | Valve Cap O'Ring                         | 1   |
| 3    | 681.578    | Valve Spring                             | 1   |
| 4    | 312.531    | Valve Stem                               | 1   |
| 5    | 658.239    | Valve Seat O'Ring                        | 1   |
| 6    |            | Valve Body                               | 1   |
| 7    | 321.574    | Throttle Lever                           | 1   |
| 7a   | 6153212470 | Safety Lever (B16 only)                  | 1   |
| 8    | 6156350410 | Roll Pin                                 | 1   |
| *    | 395.518    | Valve Body Assembly (includes items 1-8) | 1   |
| 9    | 6153000480 | Rubber Handle Grip                       | 1   |
| 17   | 6157700570 | Ball 6mm diameter (Polyurethane)         | 1   |
| 18   | 6156583260 | Ball Retaining O'Ring                    | 1   |
| 10   | 6155731350 | Cover Assembly (Pistol Grip) B18         | 1   |
|      | 6155731370 | Cover Assembly (Pistol Grip) B19         | 1   |
| 10a  | 6155731360 | Cover Assembly (Inline) B16              | 1   |
| 12   | 6155961060 | Guide Plate B16, B18                     | 1   |
| "    | 6155961070 | Guide Plate B19                          | 1   |
| 13   | 6156500340 | Guide Plate Seal B16, B18                | 1   |
| "    | 6156500350 | Guide Plate Seal B19                     | 1   |
| 14   | 658.243    | Guide Plate O'Ring B16, B18              | 1   |
| "    | 658.243    | Guide Plate O'Ring B19                   | 1   |
| 15   | 6154001530 | Cylinder B16, B18                        | 1   |
| "    | 6154001540 | Cylinder Sub Assembly B19                | 1   |
| 19   | 6156452390 | Piston Cushion B16, B18                  | 1   |
| "    | 6156452400 | Piston Cushion B19                       | 1   |
| 22   | 6154320090 | Intermediate Tube B16, B18               | 1   |
| "    | 6154320100 | Intermediate Tube B19                    | 1   |
| 23   | 6155731380 | Intermediate Tube Outer Sleeve B16, B18  | 1   |
| "    | 6155731390 | Intermediate Tube Outer Sleeve B19       | 1   |
| 24   | 6156870670 | Circlip B19                              | 1   |
| 25   | 658.243    | Front Tube Locking O'Ring B16, B18       | 1   |
| "    | 658.243    | Front Tube Locking O'Ring B19            | 1   |

| Item | Part No    | Description  | Qty |
|------|------------|--|-----|
| 26   | 6151430550 | Piston B16, B18  | 1   |
| "    | 6151430560 | Piston B19   | 1   |
| 28   | 6151550170 | Valve Pin  | 1   |
| 29   | 6156583310 | Piston Ring B16, B18                                       | 1   |
| "    | 6156583320 | Piston Ring B19  | 1   |
| 30   | 6152520130 | Needle Holder (3mm) B16, B18                               | 1   |
| "    | 6152520140 | Needle Holder (3mm) B19                                    | 1   |
| 31   |            | Needle Chisel (3mm) B16, B18                               | 19  |
| "    |            | Needle Chisel (3mm) B19                                    | 28  |
| 32   | 6156901000 | Front Spring B16, B18                                      | 1   |
| "    | 6156901010 | Front Spring B19   | 1   |
| 33   | 6155961030 | Front Tube Insert + Spacer B16, B18                        | 1   |
| "    | 6155961040 | Front Tube Insert B19                                      | 1   |
| 34   | 6155751210 | Front Tube B16, B18  | 1   |
| "    | 6155751220 | Front Tube B19   | 1   |
| 35   | 6156452410 | Cylinder Stem Reaction Ring B16, B18                       | 1   |
| "    | 6156452420 | Cylinder Stem Reaction Ring B19                            | 1   |
| 36   | 6152505600 | Anvil B16, B18   | 1   |
| "    | 6152505610 | Anvil B19  | 1   |
| 37   | 6152520150 | Chisel Holder B16, B18                                     | 1   |
| "    | 6152520160 | Chisel Holder B19  | 1   |
| 38   | 6158046180 | Chisel, width 3/4" (19mm), length 7" (178 mm) B18BV, B19BV | 1   |
| "    | 6158046220 | Chisel, width 3/4" (19 mm), length 10" (254 mm) B16BV      | 1   |
| 39   |            | Screw (included 37) B16BV, B18BV, B19BV                    | 1   |
|      |            | Nameplate  | 1   |


|   |            |                     |
|---|------------|---------------------|
|  | 6158727980 | Warning label       |
|   | 6159948780 | Safety instructions |
|   | 6159948610 | Operator's manual   |

## Accessories included



 
| Item | Part No    | Description                                  | Qty |
|------|------------|--|-----|
| 40   | 6155961050 | 1/4" air hose nipple for 10mm (3/8") ID hose | 1   |
| 41   | 6158020560 | Hex. Key 6mm                                 | 1   |

## Optional accessories B16BV, B18BV, B19BV

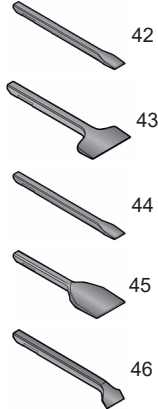

| Item | Part No    | Description   | Qty |
|------|------------|---|-----|
| 42   | 6158046180 | Chisel 1/2" square shank 7" (180 mm) long x 3/4" (19 mm) wide blade               | 1   |
| 43   | 6158046190 | Chisel 1/2" square shank 7" (180 mm) long x 2 1/2" (64 mm) wide blade             | 1   |
| 44   | 6158046200 | Chisel 1/2" square shank 10" (254 mm) long x 3/4" (19 mm) wide blade              | 1   |
| 45   | 6158046210 | Chisel 1/2" square shank spark resistant 7" (180 mm) long x 2" (50 mm) wide blade | 1   |
| 46   | 6158046220 | Chisel 1/2" squ shk 7" (180 mm) long x 1 3/8" (35 mm) wide cranked blade          | 1   |

## Optional accessories B16MV, B18MV, B19MV

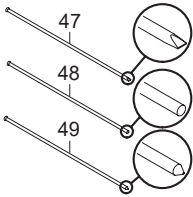

| Item | Part No    | Description                        | Qty |
|------|------------|------------------------------------|-----|
| 47   | 6153998190 | Chisel tip needles Ø1/8" (Ø3 mm)   | 100 |
| "    |            | Chisel tip needles Ø5/32" (Ø4 mm)  | 100 |
| 48   | 6153998160 | Flat tip needles Ø5/64" (Ø2 mm)    | 100 |
| "    | 6153998170 | Flat tip needles Ø1/8" (Ø3 mm)     | 100 |
| "    | 6153998180 | Flat tip needles Ø5/32" (Ø4 mm)    | 100 |
| 49   | 6153998210 | Pointed tip needles Ø1/8" (Ø3 mm)  | 100 |
| "    | 6153998220 | Pointed tip needles Ø5/32" (Ø4 mm) | 100 |

## CONVERSION TO CHISEL HAMMER

Unscrew the front sleeve (34) and remove it, along with all the needles (30, 31, 32). Slide the anvil (36) into the casing (22). Position the spring (32) on the anvil (36). Screw the chisel support (37) and tighten. Secure the assembly using the screw (39). Slide the chisel into the support (37) and lock by turning the support ring (37) by one half turn.

## CONVERSION TO NEEDLE SCALER

Loosen the Screw (39). Unscrew the chisel holder (37). Remove the spring (32) and the anvil (36). Slide the needles (31) and the support (30) into the casing (22). Position the spring (32) around the needles in the casing (22). Slide the part (33) in the front sleeve (34) to the end. Tightly screw the front sleeve (34) on the casing (22).