


Assembly instructions	
1, 2, 3, 4, 5, 6, 7, 8	Use Grease Molykote GN or GN Plus Paste
10, 13	Loctite 242
10	21 Nm (15 ft.lb)
13	11 Nm (8 ft. Lb)

ITEM	COMPONENT	TS4L-01-07-YYYY		TS4L-01-08-YYYY		TS4L-01-09-YYYY		TS4L-01-10-YYYY		TS4L-01-11-YYYY		TS4L-01-12-YYYY		QTY
		DESCRIPTION	PARTS NO.	DESCRIPTION	PARTS NO.	DESCRIPTION	PARTS NO.	DESCRIPTION	PARTS NO.	DESCRIPTION	PARTS NO.	DESCRIPTION	PARTS NO.	
1	Ratchet	TS4L-01-07-113	6152312075	TS4L-01-08-203	6152312135	TS4L-01-09-206	6152312155	TS4L-01-10-209	6152312165	TS4L-01-11-212	6152312175	TS4L-01-12-302	6152310315	1
		TS4L-01-07-114	6152312085	TS4L-01-08-206	6152312145	TS4L-01-09-209	6152310325	TS4L-01-10-212	6152310805	TS4L-01-11-213	6152310305	TS4L-01-12-80MM	6152312205	1
		TS4L-01-07-200	6152312095							TS4L-01-11-215	6152312185			1
		TS4L-01-07-202	6152312105											1
		TS4L-01-07-203	6152312115											1
		TS4L-01-07-M55	6152312125											1
2	Drive Pawl	TL4L-02-07	6158126305	TL4L-02-08	6158126315	TL4L-02-09	6158126325	TL4L-02-10	6158126335	TL4L-02-11	6158126345	TL4L-02-12	6158126355	1
3	Drive Block	TS4L-03-07	6158127405	TS4L-03-08	6158127415	TS4L-03-09	6158127425	TS4L-03-10	6158127435	TS4L-03-11	6158127445	TS4L-03-12	6158127455	1
4	Link Plate Right	TS4L-04-07-1	6155656695	TS4L-04-08-1	6155656705	TS4L-04-09-1	6155656715	TS4L-04-10-1	6155656725	TS4L-04-11-1	6155656735	TS4L-04-12-1	6155656745	1
5	Link Plate Left	TS4L-04-07-2	6155656755	TS4L-04-08-2	6155656765	TS4L-04-09-2	6155656775	TS4L-04-10-2	6155656785	TS4L-04-11-2	6155656795	TS4L-04-12-2	6155656805	1
6	Top Spacer	TS4L-06	6158127465	TS4L-06	6158127465	TS4L-06	6158127465	TS4L-06	6158127465	TS4L-06	6158127465	TS4L-06	6158127465	1
7	Link Locator Pin	TL4L-08	6158125035	TL4L-08	6158125035	TL4L-08	6158125035	TL4L-08	6158125035	TL4L-08	6158125035	TL4L-08	6158125035	3
8	Concentric Strap	TS4L-11-07	6158127485	TS4L-11-08	6158127495	TS4L-11-09	6158127505	TS4L-11-10	6158127515	TS4L-11-11	6158127525	TS4L-11-12	6158127535	1
9A	Retract Spring	TL4L-12	6156901455	TL4L-12	6156901455	TL4L-12	6156901455	TL4L-12	6156901455	TL4L-12	6156901455	TL4L-12	6156901455	1
9B	Retract Spring	TL2L-12	6156901385	TL2L-12	6156901385	TL2L-12	6156901385	TL2L-12	6156901385	TL2L-12	6156901385	TL2L-12	6156901385	1
10	Link Locator Screw	TL4L-20	6156102305	TL4L-20	6156102305	TL4L-20	6156102305	TL4L-20	6156102305	TL4L-20	6156102305	TL4L-20	6156102305	6
11	Top Spacer Roll Pin	TL4L-21	6156350975	TL4L-21	6156350975	TL4L-21	6156350975	TL4L-21	6156350975	TL4L-21	6156350975	TL4L-21	6156350975	1
12	Retract Spring Roll Pin	TL4C-18	6156350965	TL4C-18	6156350965	TL4C-18	6156350965	TL4C-18	6156350965	TL4C-18	6156350965	TL4C-18	6156350965	2
13	Top Spacer Screw	TL4/8L-22	6156102145	TL4/8L-22	6156102145	TL4/8L-22	6156102145	TL4/8L-22	6156102145	TL4/8L-22	6156102145	TL4/8L-22	6156102145	2
14	Drive Pawl Spring	TL4/8L-25	6156901445	TL4/8L-25	6156901445	TL4/8L-25	6156901445	TL4/8L-25	6156901445	TL4/8L-25	6156901445	TL4/8L-25	6156901445	2
15	Solid Pin	TS4L-12	6156350995	TS4L-12	6156350995	TS4L-12	6156350995	TS4L-12	6156350995	TS4L-12	6156350995	TS4L-12	6156350995	1

	6159921230	Operator's Manual
	CA155779	Warning Label
	6159921190	Safety Instructions